

ENGINE GUARD

| Accessory Name | Parts Number | Application Model | Issue Date | Publication No. | FRT |
|-------------------|---------------|-------------------|------------|-----------------|-------|
| ENGINE GUARD | 08P71-MKS-E00 | CRF1100A4/D4/AL4/ | 2023.8 | MII | 1.0 H |
| GUARD ATTACTHMENT | 08P75-MKS-E00 | DL4 | 2020.0 | | |

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:

Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

NOTICE TO WARNING YOU CAN BE KILLED OF SERIOUSLY HURT IF YOU don't follow instructions.

♠ CAUTION You CAN be HURT if you don't follow instructions.

MOTICE The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

NOTE Things you want to know, things that are useful to know.

Follow the instructions of the Service Manual.

Follow the other symbol instructions of the "Installation Instructions BASIC".

Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures.

Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

ACAUTION

To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTICE

Take care not to damage the painted surfaces of the motorcycle.


NOTE:

- Disconnect the negative (-) cable from the battery before installing this accessory.
- · Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.
- After reconnecting the battery, refer to the motorcycle Owner's Manual and set the meter.
- After this accessory installation, check the lights (e.g. right/left turn signal lights and brake lights) for proper operation.
- Although the illustration is of CRF1100D4, use the same procedures for other models unless otherwise indicated.
- · Save all removed parts unless otherwise indicated.

PARTS LIST

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.


<ENGINE GUARD>

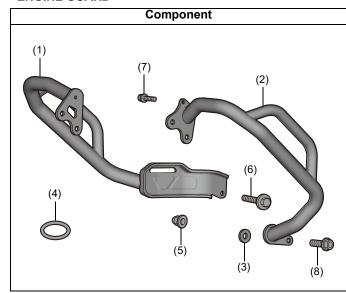

| No. | Parts Name | Qty | Parts No. |
|-----|--------------------------|-----|----------------|
| (1) | Right engine guard | 1 | - |
| (2) | Left engine guard | 1 | - |
| (3) | Engine guard spacer | 1 | 08P18-MKS-E00* |
| (4) | Gasket | 2 | 18291-MM8-880 |
| (5) | 8 mm flange cap nut | 4 | 90208-438-000 |
| (6) | 8 x 45 mm washer bolt | 1 | - |
| (7) | 6 x 10 mm flange bolt | 2 | 96300-06010-08 |
| (8) | 8 x 20 mm SH flange bolt | 5 | - |

^{*:} ED type can be ordered.

<GUARD ATTACHMENT>

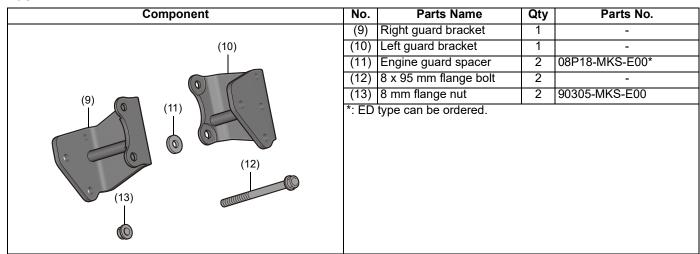



TORQUE INFORMATION


Refer to the Service Manual for the torque values including standard torque of the removed parts. (in)


INSTALLATION


Refer to the Service Manual for motorcycle, remove the motorcycle parts as shown, and disconnect the negative (–) cable from the battery. (📵) <LEFT SIDE> <RIGHT SIDE> <RIGHT SIDE> **INSTALLATION IMAGE**

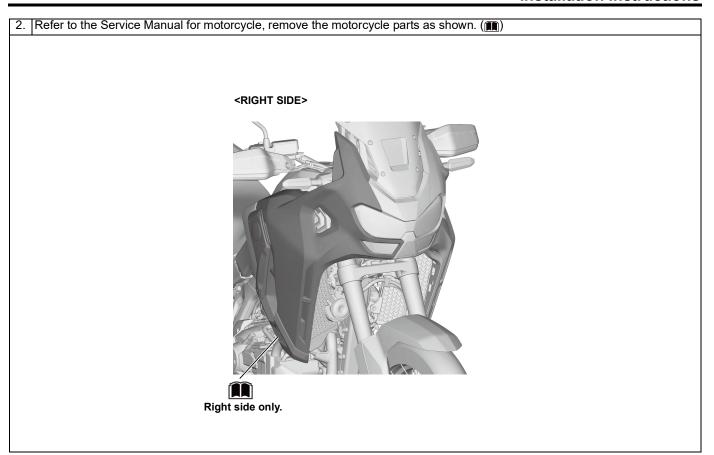


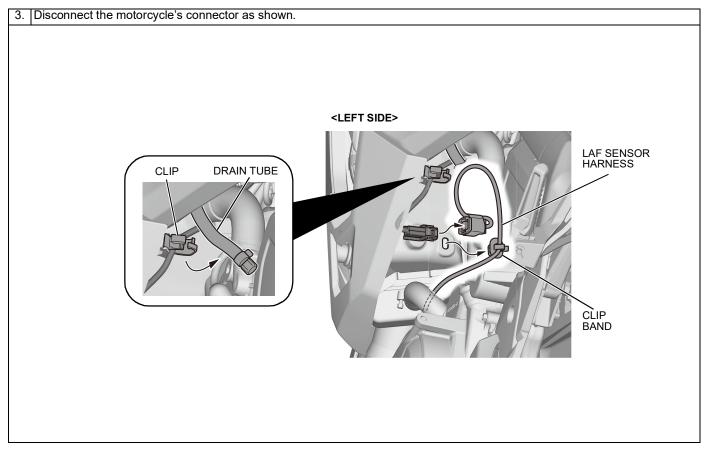


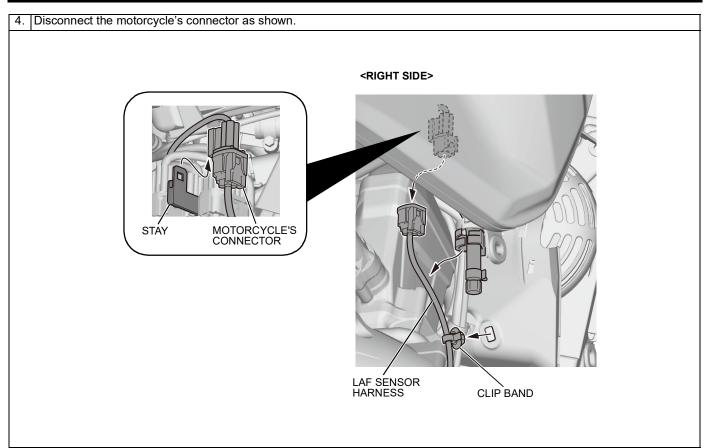


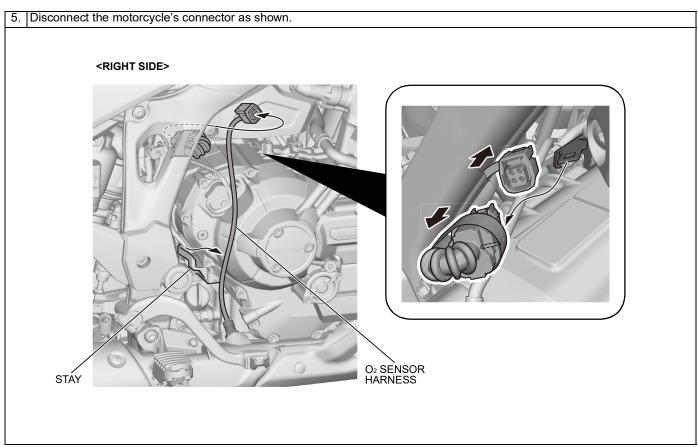


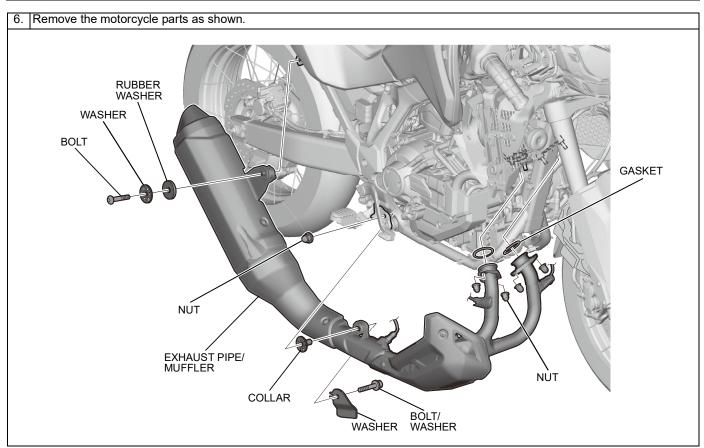


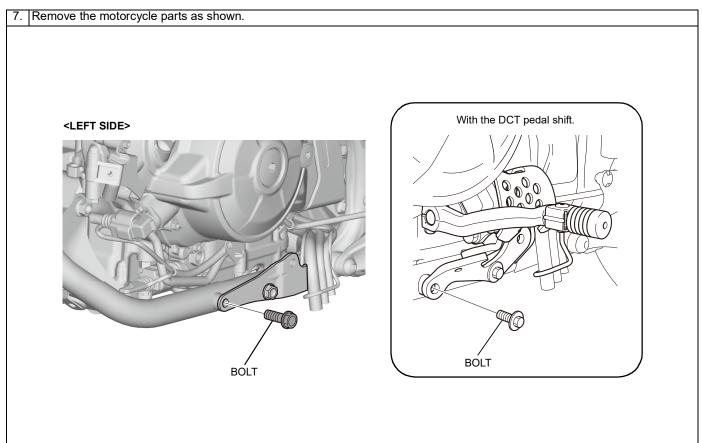


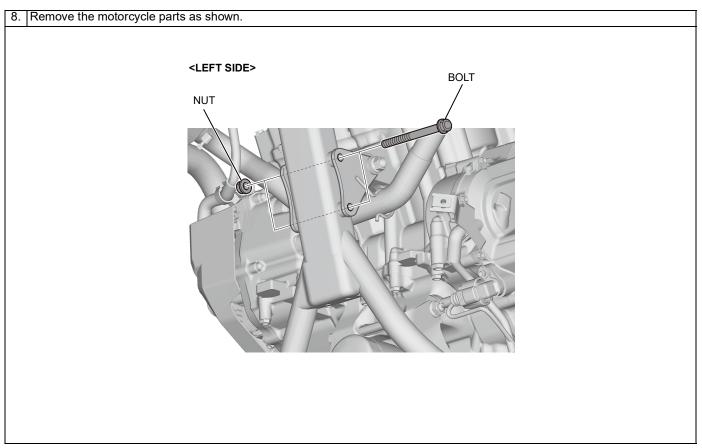

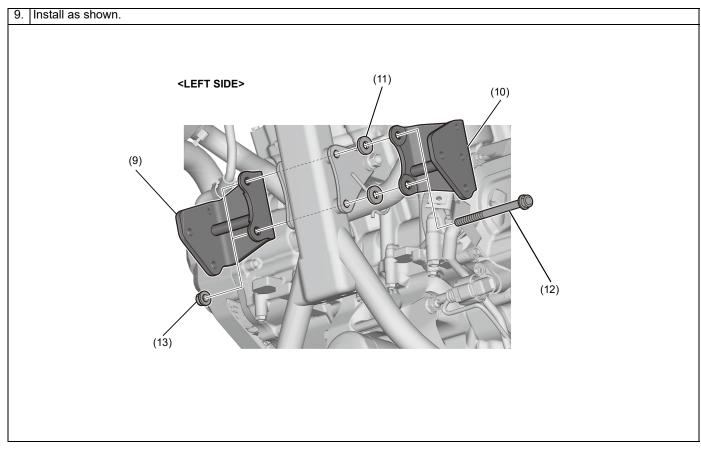

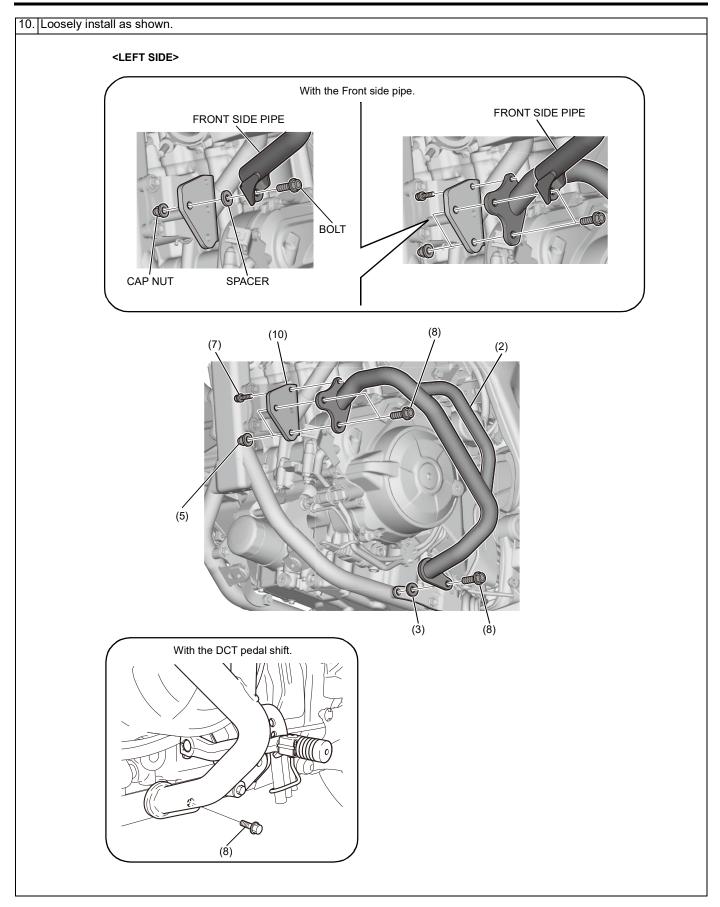

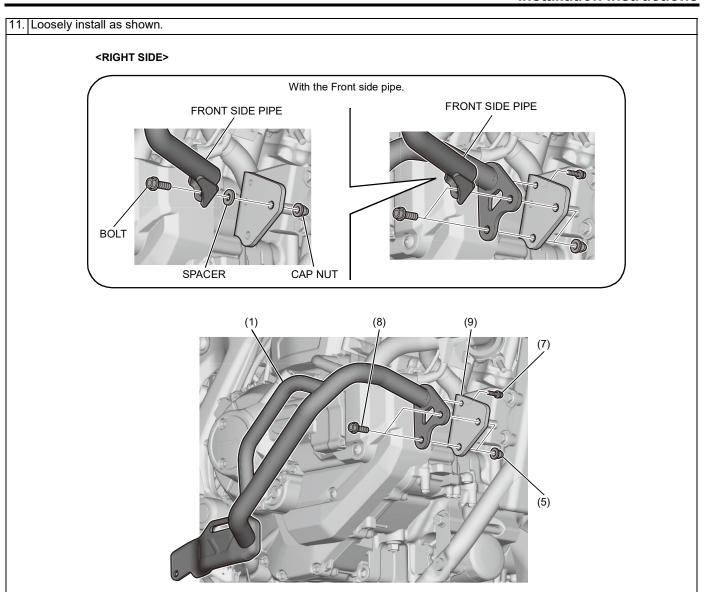

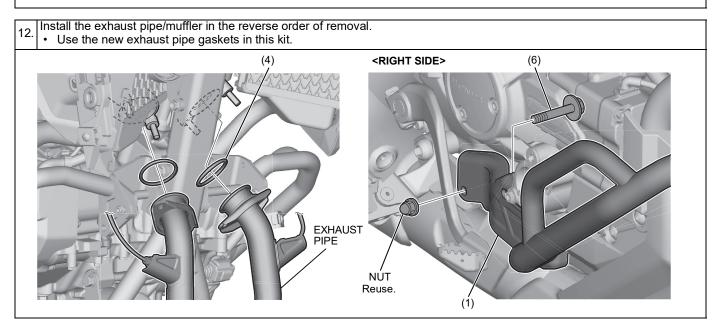

| 13. | Tighten | all | loosely | installed | parts | securely | ٧ |
|-----|---------|-----|---------|-----------|-------|----------|---|

Install the motorcycle's parts in the reverse order of removal.Confirm that any wire harness is not caught or too tight.