


Honda Dealer: Please give a copy of these instructions to your customer.


PARTS LIST

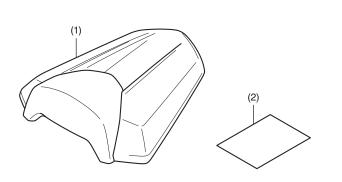


No.	Description	Qty
(1)	Seat cowl	1
(2)	URL paper	1

INSTALLATION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.
- 1. Remove the pillion seat as shown.

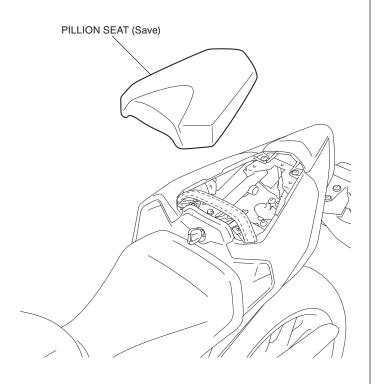

2. Remove the belt as shown.

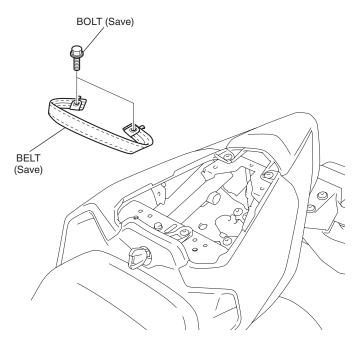

- 3. Install the seat cowl as shown.
 - Insert the hook, and then press down the front side of seat cowl to install.
 - After installing, check that the seat cowl is locked securely. Failure to lock the seat cowl securely may cause it to fall off while riding.

