



INSTALLATION INSTRUCTIONS


Accessory
ACCESSORY SOCKET
P/N 08U70-MKS-E00

Application
CRF1100A/D

Publication No.
MII
Issue Date
June 2021

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

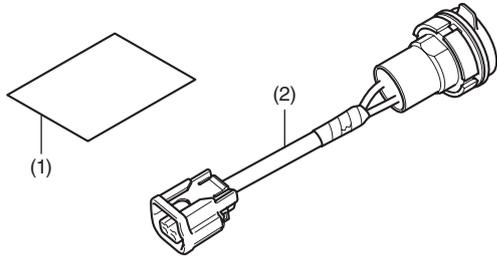

No.	Description	Qty
(1)	URL paper	1
(2)	Accessory socket	1

TORQUE CHART

Refer to the Service Manual for the torque values of the removed parts.

INSTALLATION

CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTE:

- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memories of the clock will be erased when you disconnect the battery. Reset the memories after reconnecting the battery.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.

- Remove the tool box and disconnect the negative (-) cable of the battery.


<Left side>

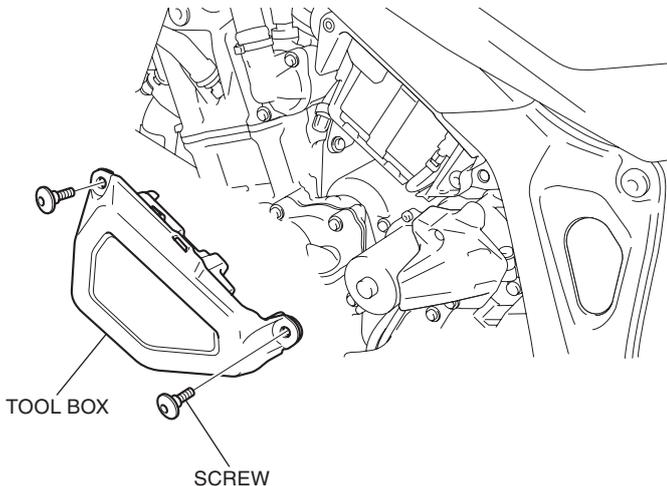

- Remove the screw as shown.


- Repeat on the right side.

<Left side>

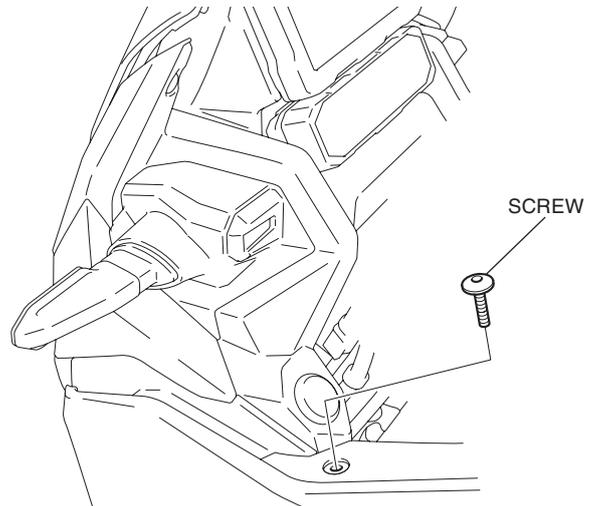


- Remove the clips as shown.

<Left side>

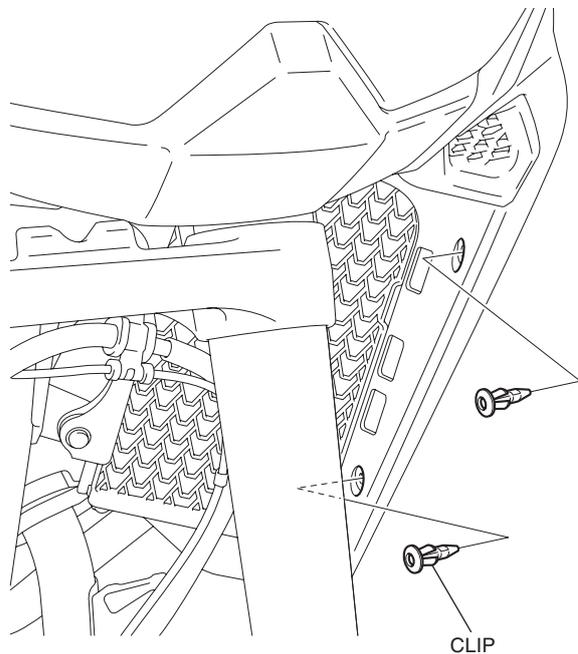


4. Remove the front tank cover as shown.

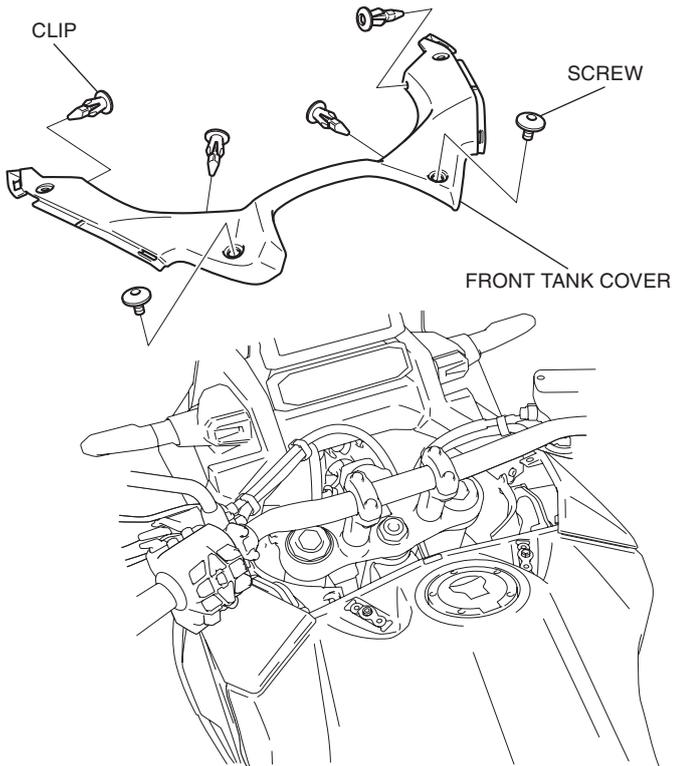


5. Remove the left middle cowl as shown.

<Left side>

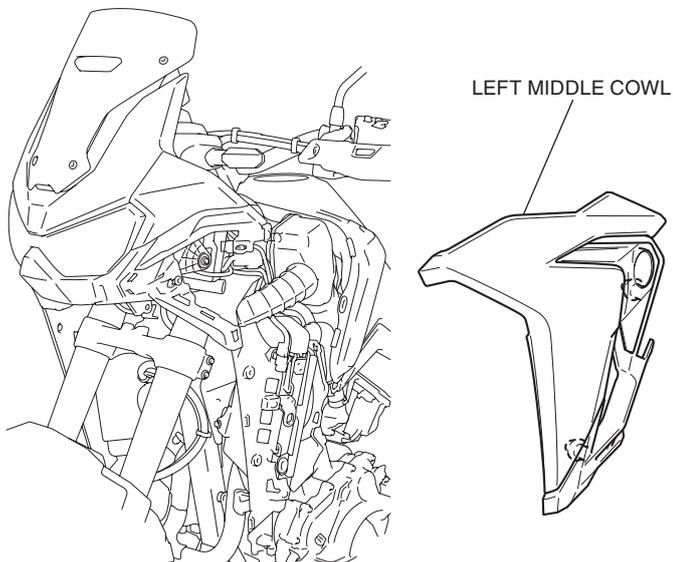


6. Remove the grommet as shown.

<Left side>

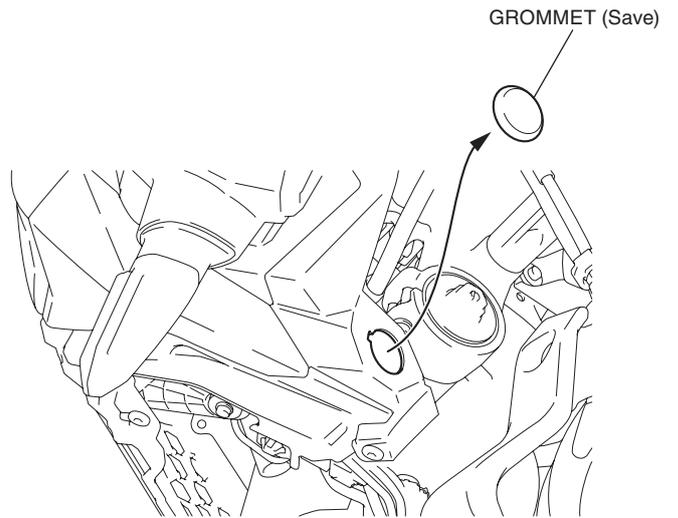


7. Remove the nut as shown.

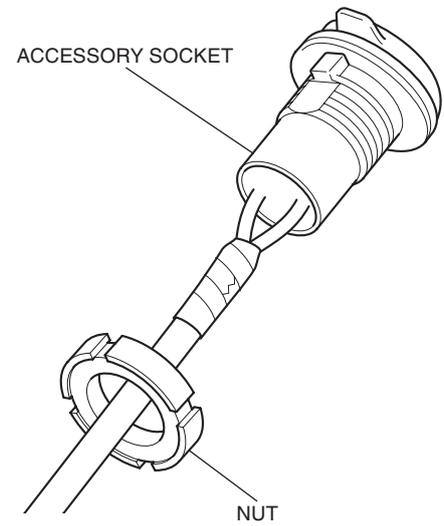


8. Remove the dummy connector as shown.


<Left side>

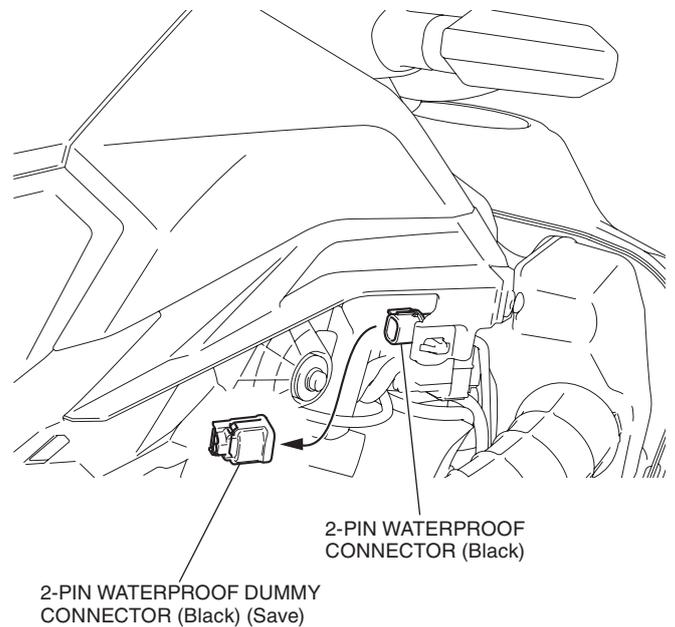

9. Install the accessory socket as shown.

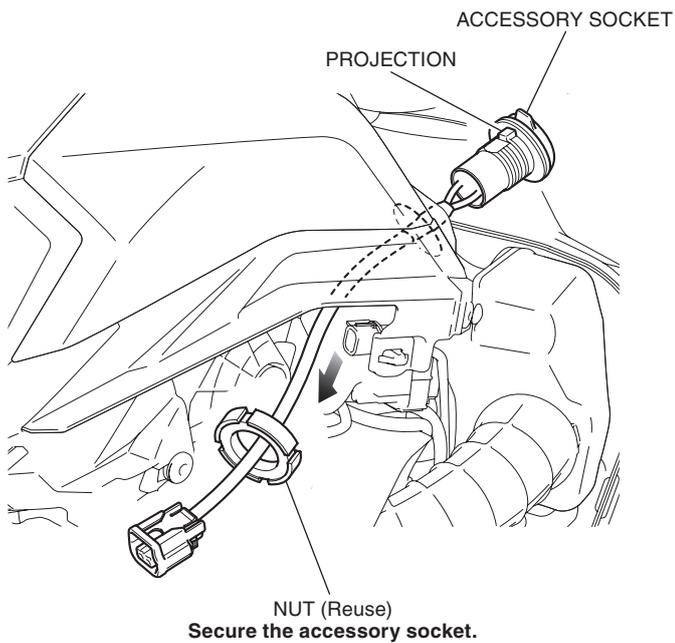

10. Connect the accessory socket harness as shown.

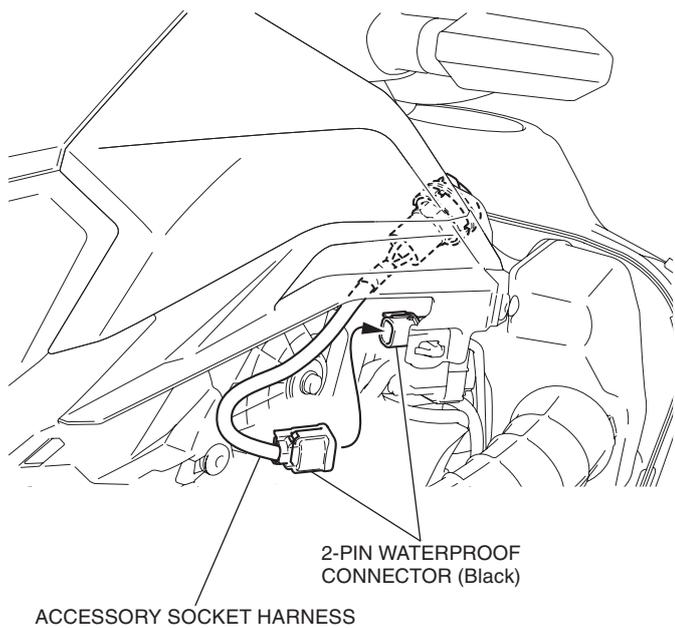

11. Install the motorcycle's parts in the reverse order of removal.

- **Confirm that any wire harness is not caught or too tight.**

12. Check the accessory socket, headlight and the other lights for proper operation.