



INSTALLATION INSTRUCTIONS


Accessory
REAR CARRIER
P/N 08L72-MKP-J00

Application
CB500FA
CBR500RA

Publication No.
MII
Issue Date
October 2018

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

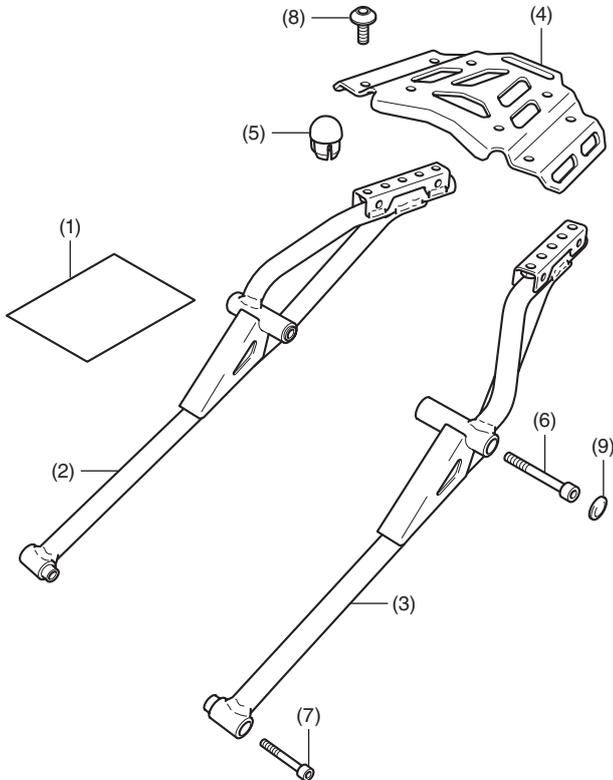

No.	Description	Qty
(1)	URL paper	1
(2)	Right rear carrier pipe	1
(3)	Left rear carrier pipe	1
(4)	Rear carrier plate	1
(5)	Rear cap	2
(6)	10 mm socket bolt	2
(7)	8 mm socket bolt (long)	2
(8)	8 mm socket bolt (short)	4
(9)	Socket bolt cap	4

TOOLS REQUIRED

Hex wrench (6 and 8 mm)
Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
8 mm socket bolt (short)	22	2.2	16
8 mm socket bolt (long)	37	3.8	27
10 mm socket bolt	39	4.0	29

MAXIMUM LOADING CAPACITY

- The weight of the cargo must not exceed the following maximum loading capacity:

Maximum Loading Capacity	
Rear carrier	5.0 kg (11.0 lb)


INSTALLATION

▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

- Remove the bolts as shown.
 - Repeat on the right side.


<Left side>

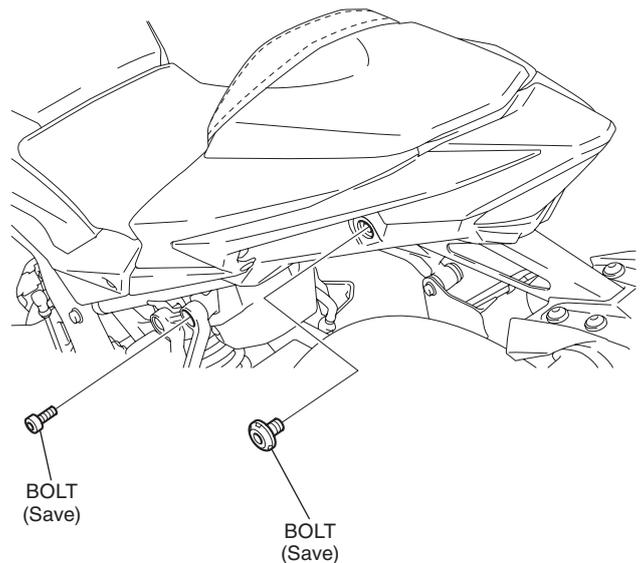


- Install the rear cap as shown.
 - Repeat on the right side.

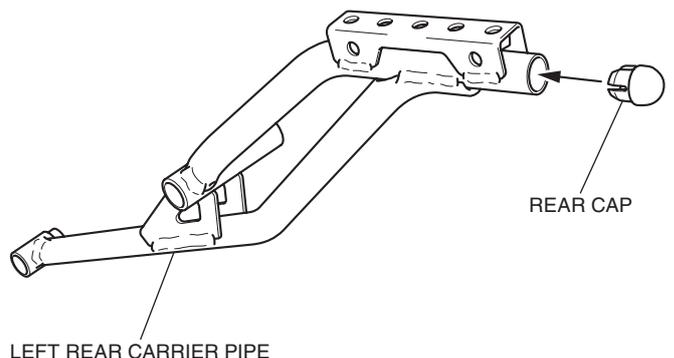


3. Loosely install the left rear carrier pipe as shown.
- Repeat on the right side.

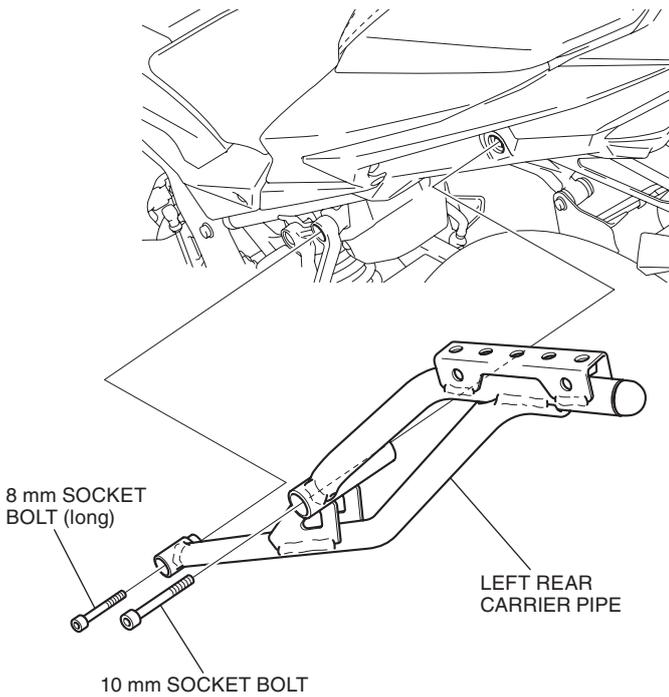


4. Loosely install the rear carrier plate as shown.

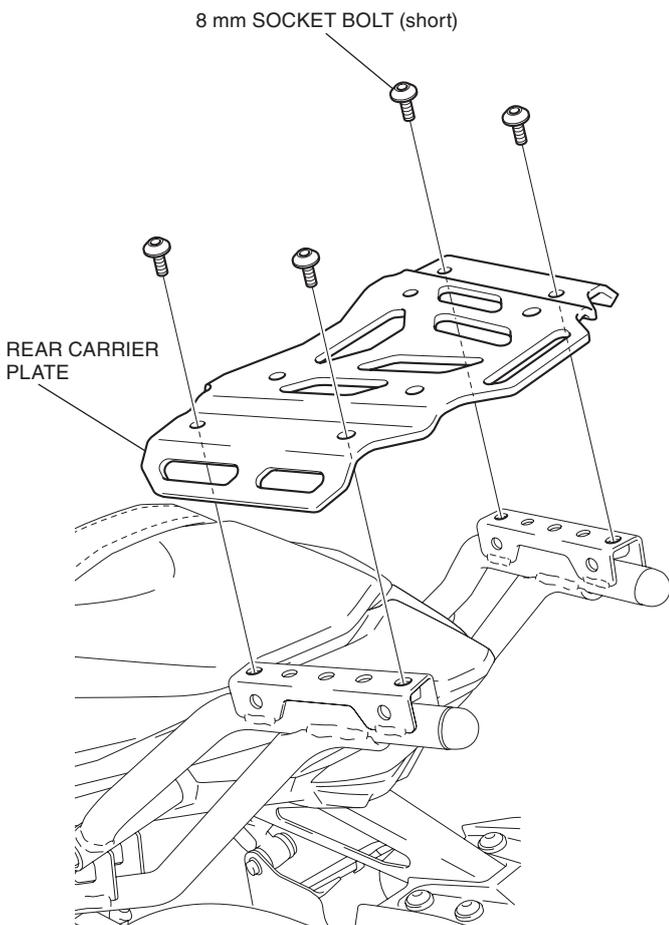

5. Securely tighten the 8 mm and 10 mm socket bolt as shown.
- Repeat on the right side.

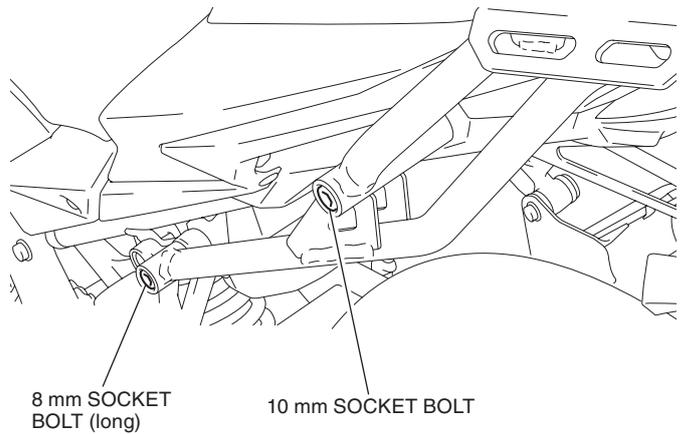

6. Securely tighten the 8 mm socket bolts as shown.

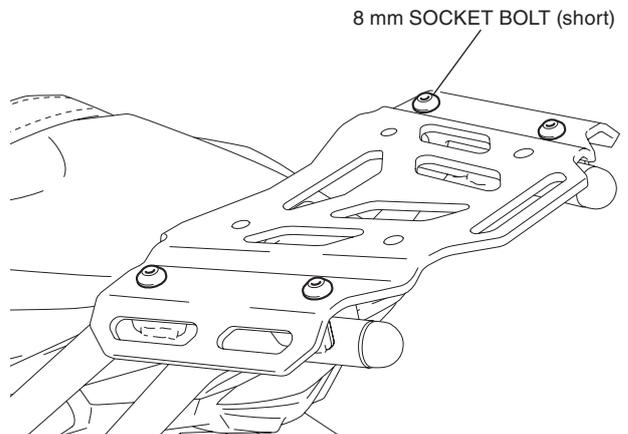

7. Install the socket bolt caps as shown.
- Repeat on the right side.

